

FOLLOW THE REMOTE PAIRING INSTRUCTIONS FOR YOUR SPECIFIC CONFIGURATION BELOW



4K AND BELOW & PWC FREESTANDING LIFTS

Unlock the remote (see reverse for unlock instructions)

Make sure the remote is in the desired mode (see reverse for mode unlock states)

- Mode #1 is reserved for lift operation.
- Mode #2 is reserved for ShoreScreen curtain operation.

Make sure battery is connected to controller.


Turn the key switch to the ON position.

Place the controller into pairing mode.

- Trip the top limit switch 10 times within 30 seconds.
- You will see the light on the controller flash blue and red.
- NOTE: The controller will clear all remotes from memory every time it enters pairing mode.

Press the UP button (aka the ON button) on the remote once to pair with the controller.

In this configuration, 4 remotes can be paired.

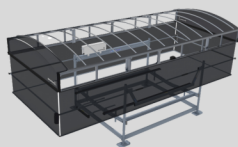

REVOLUTION, LEGACY, & BOATHOUSE SHORESCREEN

Unlock the remote (see reverse for unlock instructions)

Make sure the remote is in the desired mode (see reverse for mode unlock states)

- Mode #1 is reserved for lift operation.
- Mode #2 is reserved for ShoreScreen curtain operation.

Make sure battery is connected to controller.

Turn the key switch to the ON position.

Place the controller into pairing mode.

- Push and hold the pairing button just next to the LEX light until the relay beeps.
- The LED light will now be a flashing RED/BLUE LED.
- NOTE: The controller will clear all remotes from memory every time it enters pairing mode.

Press the UP button (aka the ON button) on the remote once to pair with the controller.

- The flashing blue/red light will go solid.

In this configuration, 4 remotes can be paired.



5K AND ABOVE FREESTANDING AND PERMANENT LIFTS



Unlock the remote (see reverse for unlock instructions)

Make sure the remote is in the desired mode (see reverse for mode unlock states)

- Mode #1 is reserved for lift operation.
- Mode #2 is reserved for ShoreScreen curtain operation.

Make sure battery is connected to controller.

Turn the key switch to the ON position.

HPU012/24 ONLY

Place the controller into pairing mode.

- Trip the top limit switch 10 times within 30 seconds.
- The amber light plugged into the Light #1 output indicates the controller is in pairing mode.
- If no amber light plugged in, listen for the controller to 'click'.

Press the UP button (aka the ON button) on the remote once to pair with the controller.

- The amber will flash when paired.

ADDING OR REPLACING A WIRELESS CONTROLLER/RELAY ON SHORESCREENS AND LIFTS 4K LBS AND SMALLER MANUFACTURED BEFORE APRIL 2023 WILL NEED A SERVICE KIT SOLD BY SHORESTATION. ASK YOUR SHORESTATION SALES REPRESENTATIVE FOR ASSISTANCE.

HPU300 & HPU400 WITHOUT UPPER LIMIT SWITCH ONLY

Place the controller into pairing mode.

- Click the microswitch 10 times.
- The amber light plugged into Light #1 output should flash.
- If no amber light plugged in, listen for the controller to 'click'.
- Press the "up" button.
- The amber light should flash again.

In this configuration, 5 remotes can be paired.



Unlock the Wireless Remote Control

The key fob is locked when all 5 Mode Indicator lights flash when a button is pressed on the key fob. To unlock the key fob, hold select until the first light flashes or hold both the Up and Down buttons at the same time for 5 seconds. The mode indicator light will flash indicating that the key fob is unlocked. If no button is pressed for 3 minutes, the key fob will automatically go into lock mode and will need to be unlocked again.



Place the Wireless Remote Control in the 'Mode Unlock' State

To place the remote in the Mode Unlock State, press and hold the Select button down until the mode indicator light stops flashing (about 10 seconds). The mode indicator light will be solid on Mode 1. The controller is now in the 'Mode Unlock' state. The controller will automatically go back into the normal state if no buttons are pressed for more than 5 seconds. If this happens, you will need to repeat this step.

Unlock Mode #2

ShoreStation control systems reserve Mode #2 for the ShoreScreen Power Curtain operation. With the remote in the Mode Unlock State, move through the modes by pressing ON or OFF to enable or disable the indicated mode. When on Mode #2, press ON to enable it. Wait for 5 or more seconds until the controller goes back into the normal operation state (flashing on Mode 1). To check to ensure Mode #2 is unlocked, press and release the Select button. The mode indicator light should move to Mode #2.

Note: Do not unlock other modes unless you have installed the accessories for these modes (lights, limit switches, etc.).

Test the Wireless Operation

Test the operation of the wireless by switching to Mode #1 using the Select button. Test the boat lift operation. Switch to Mode #2 (using the Select button) and test the curtain operation.

IF BOTH SYSTEMS ARE OPERATED FROM THE SAME MODE (EXAMPLE BOTH THE LIFT AND SHORESCREEN OPERATE USING MODE #1), THE SHORESCREEN MUST BE RE-PAIRED TO FIX THIS BY REPEATING THIS PROCESS. DO NOT OPERATE THE SYSTEMS FROM THE SAME MODE.