

## ShoreStation Hydraulic Wireless Pairing Instructions

### Pair the wireless controllers with the lift controller.

- o Unlock the key fobs.
- o Turn the lockout key to the ON position.
- o Trip the top limit switch 10 times in less than 30 seconds. The light 1 output should flash once to indicate it is in pairing mode. *This process is the same for when no upper*



*limit switch is installed and the jumper wire is installed. Pull the plug apart, slide one side in until a connection is made then tap other connection 10 times.*

- o Press the UP or DOWN button on the wireless control once. The Light 1 output should flash once to indicate it paired with the wireless control. Repeat for the other controller.
- o The Light 1 output should flash 2 times after a few seconds to indicate it is no longer in pairing mode.
- o Test the wireless controllers to see if they run the lift. If not, the wireless controls may need to be replaced.

## ShoreStation Power Winch Wireless Pairing Instructions

### Step 1 – Unlock the remote control

Press and hold up and down buttons on the new remote control until the mode one light blinks.

### Step 2 – Set the receiver into ‘program mode’

Press and hold the programming button located on the lift controller until it beeps once.

Electric controllers are located inside the winch case. You may need to remove one mounting bolt from the receiver to gain access to the programming button. If you have trouble pressing the button, a pointed object (ball point pen) can be pressed into the button.

### **⚠ Safety Instructions**

- Never pair a remote control with more than one lift system.
- Remove the boat from the lift when performing the pairing process.
- Wear personal protective equipment (safety glasses, gloves, etc.) when performing this process.

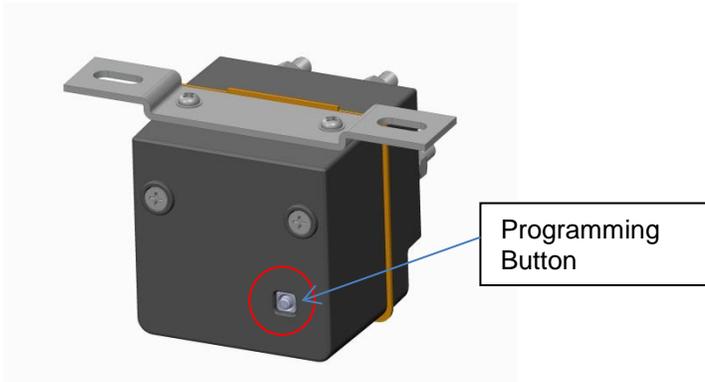


Figure 1: Electric Controller

### Step 3 – Program the remote control

Press the **UP/ON** button on the new remote control. The controller should beep again indicating that the new fob is now programmed to work with the system. Repeat this step for any other remote controls. The controller will beep twice when it has reached its maximum ten of 10 remote controls. The remote controls should now operate the lift.

**WARNING: Never program one remote control to run more than one lift in the same mode. Doing so could cause unintended operation of the lift and result in serious injury.**

To cause the receiver to ‘forget’ a remote control, repeat the programming instructions and program only the intended remote controls for the lift. Continue to press the button of the last remote control until the controller double-beeps. It should now be programmed only for these fobs.