Read manual before using hoist and for assembly help.

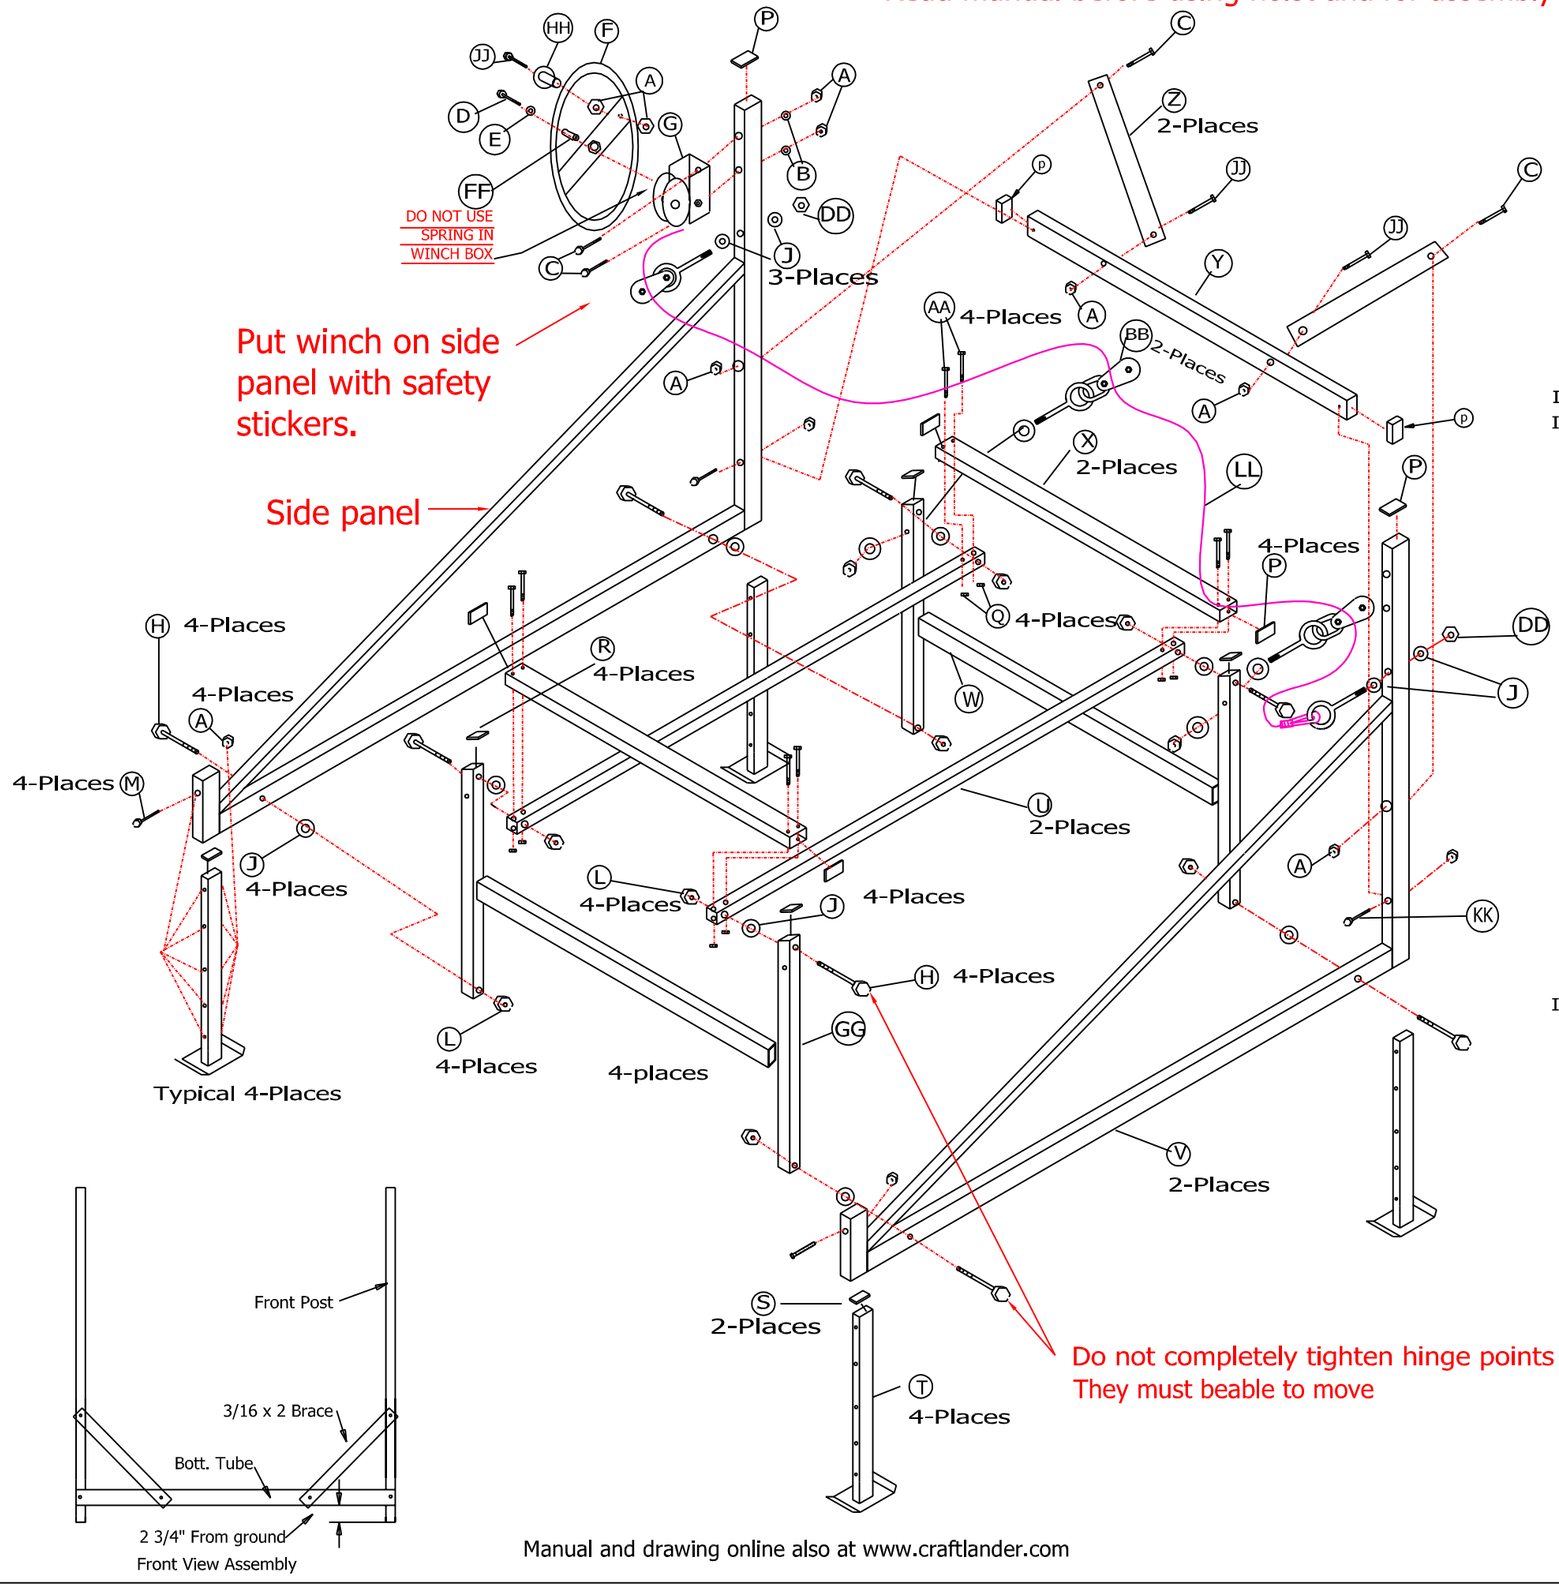

6PWC Parts List

	Item	Quanity	Description	Part Number
	A	12	3/8 Nut	NS037
	B	2	3/8 Washer	W037
	C	4	3/8 Bolt 3 1/2 lg.	B37350
IN WINCH BOX	D	1	5/16 X 1 1/4 BOLT	B31125
IN WINCH BOX	E	1	5/16 Fen.Wash.	W031
	F	1	22" Hand Wheel	WHEEL22
	G	1	1200 lb Winch	WINCH1200
	H	8	1/2 Bolt 4 lg.	B50400
	J	16	1/2 Washer	W050
	L	8	1/2 Lock Nut	NL050
	M	2	3/8 x 3 Bolt	B37300
	P	6	2 1/2 x 1 1/2 Cap	PCREC150250
	R	4	1 1/2 x 1 1/2 Cap	PCS150
	S	2	1 x 2 Cap	PCREC12
	T	4	Leg PWC	6PWCLEG
	V	2	Side Panel	6PWCSP
	U	2	Front,Back Tube	6PWCRAIL
	W	2	Stand Front	6PWCSTAND
	X	2	Side,Side Tube	6PWCCROSS
	Y	1	Bott. Tube	6PWCSPREADER
	Z	2	Brace 3/16 x 2	6PWCBRACE
	AA	8	5/16 x 3 1/2 Bolt	B31350
	Q	8	5/16 Nuts	NW031
	BB	2	1/2 Eye Pulley W/Link	SMALL PULLEY & CLS37
	CC	1	1/2 Eye Pulley No Link	SMALL PULLEY
	DD	4	1/2 Nut	NS050
	EE	1	1/4" Cable Ass'y	6PWCCABLE
IN WINCH BOX	FF	1	Spacer	6PWCSPACER
	GG	1	Stand Rear	6PWCSTAND
	HH	1	Wheel Knob	KNOB
	JJ	3	3/8 x 2 1/2 Bolt	B37250
	KK	2	3/8 x 4 1/2 Bolt	B37450

Manual and drawing online also at www.craftlander.com

NuCraft 402 S. Line Rd. Roscommon,MI 48653
Metal Products

Scale: None	Approved by:	Drawn by: RLW
Date: 3/25/03		Revised by: RLW 4/11/05

06PWC
Hoist componets & Hardware

Assembly & Parts List

Drawing Number A-101