
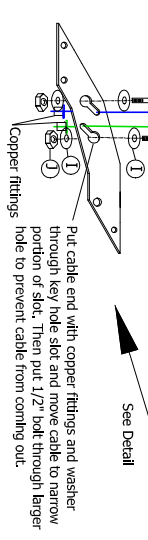


New hoists shipped with cables and pulleys factory installed. Bottom T & L clamps factory installed.

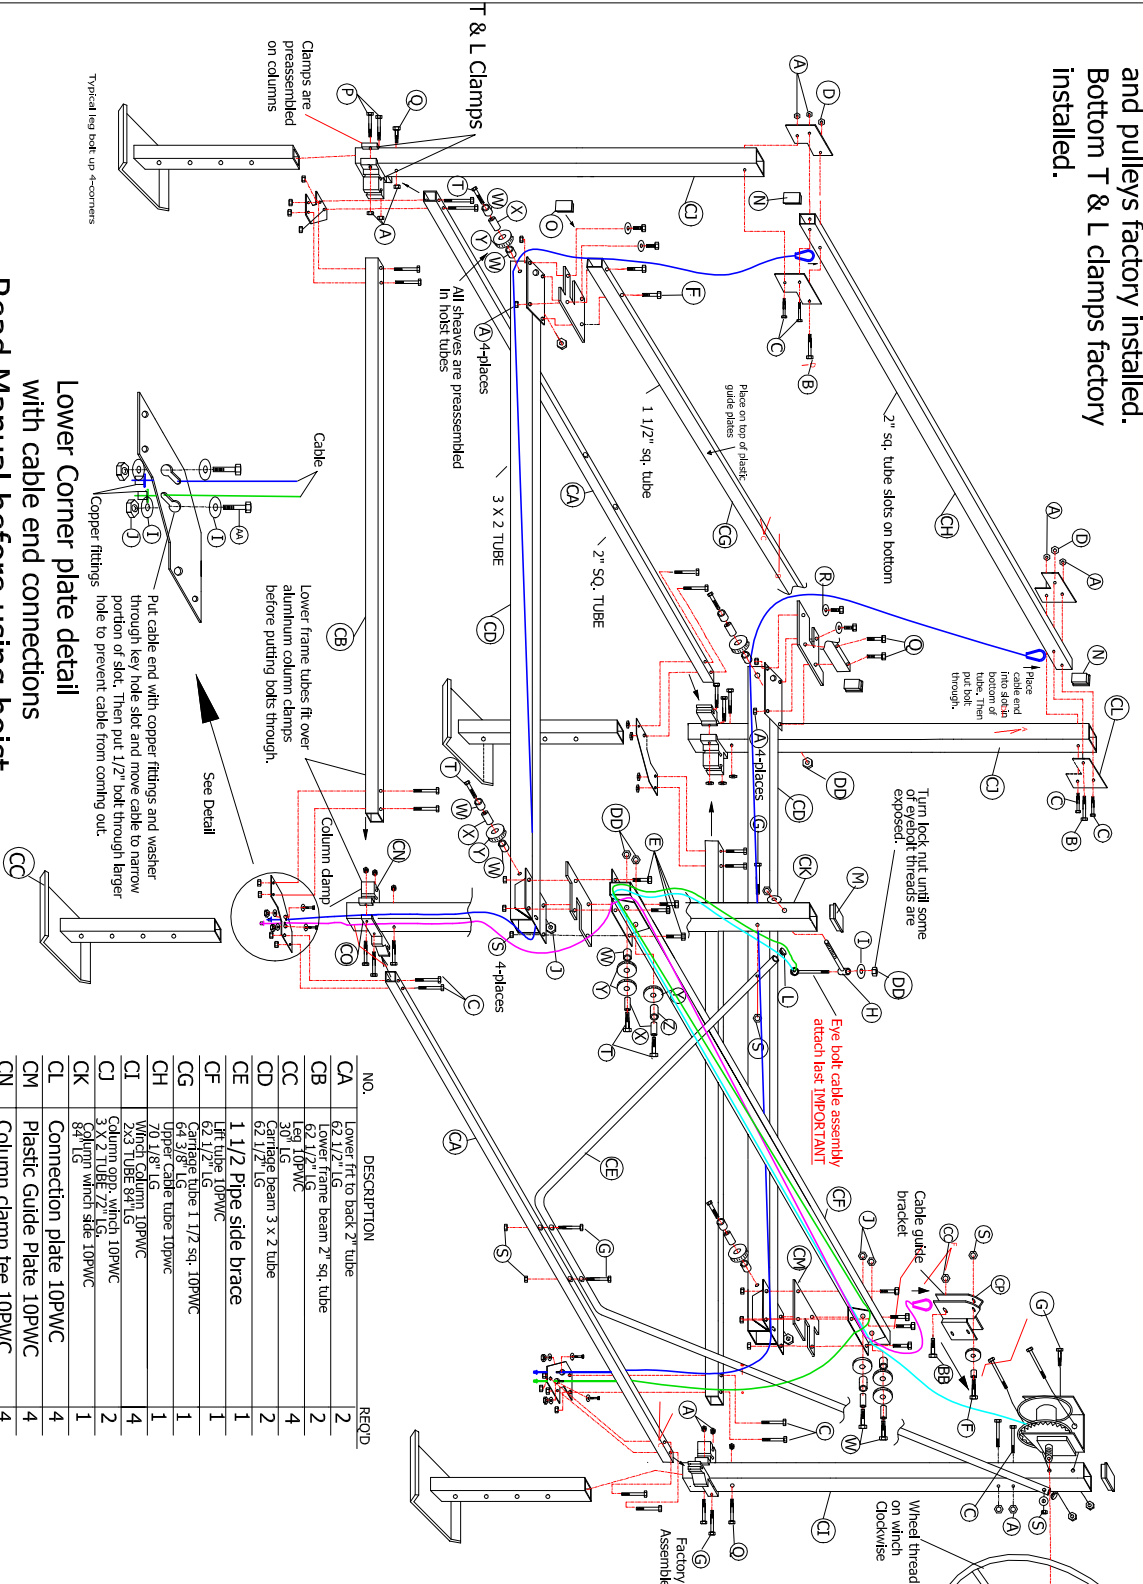


Put cable end with copper fittings and washer through key hole slot and move cable to narrow portion of slot. Then put 1/2" bolt through larger hole to prevent cable from coming out.

See Detail

Lower Corner plate connections with cable end connections. Read Manual before using hoist Manuals and other info available online www.Craftlander.com

NO.	DESCRIPTION	REQD.
CA	Lower fit to back 2" tube	2
CB	62 1/2" LG 2" x 2" frame beam 2" sq. tube	2
CC	Leg 10PWC	4
CD	Garriage beam 3 x 2 tube	2
CE	1 1/2" pipe side brace	1
CF	Lift tube 10PWC	1
CG	Cable tube 1 1/2 sq. 10PWC	1
CH	Upper cable tube 10PWC	1
CI	70 1/8" LG Wrench column 10PWC	4
CJ	2x3 TUBE 8 1/2" LG Column opp. wind 10PWC	2
CK	Column winch side 10PWC 8 1/2" LG	1
CL	Connection plate 10PWC	4
CM	Plastic Guide Plate 10PWC	4
CN	Column clamp tee 10PWC	4
CO	Column clamp "1" 10PWC	4
CP	Cable Guide 10PWC	1

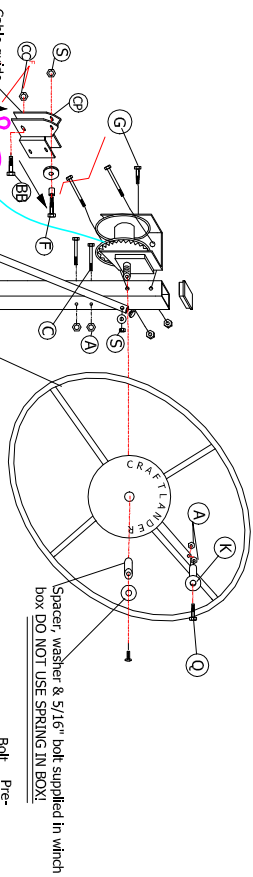

NO.	DESCRIPTION	Bolt Bag Req'd	Pre-Assembled Req'd
A	3/8 WHIZ NUTS	38	8
B	7/16 X 3 BOLT	2	
C	3/8 X 2 3/4 BOLT	22	
D	7/16 NUTS	2	
E	3/8 X 1 1/2 BOLT	13	
F	3/8 X 3 BOLT	4	
G	3/8 4 1/2 BOLT	4	
H	1/2 X 4 W/ELDED PIPE	1	
I	1/2 WASHERS	11	
J	1/2 NUTS	4	
K	KNOB	1	
L	1 3/4 ROUND CAP	2	
M	2 X 3 CAP	2	
N	2 X 2 CAP	2	
O	1 1/2 X 1 1/2 CAP	2	
P	3/8 X 4 BOLT	2	
Q	3/8 X 2 1/2 BOLT	5	
R	3/8 WASHER	4	
S	3/8 NYLON LOCK NUTS	13	1
T	1/2 X 3 Bolt	8	
W	Bronze Spacer 1/2"lg.	8	
X	Bronze Bushing 1 3/4"lg.	8	
Y	Sheave 2 5/8"O.D.	12	
Z	Bronze Spacer 1"lg.	2	
AA	1/2" Bolt 1 1/2" lg.	4	
BB	7/16 Bolt 2" lg.	1	
DD	1/2 Nylon Lock Nuts	3	8

NuCraft by CraftLander **MARINE DIVISION**

402 SOUTHLINE RD.
ROSCOMMON, MI 48653

Title: 10PWC ASSEMBLY

DRAWING NO. 10PWCASSEMBLY SCALE NONE DATE 2/15/05 DRAWN BY RLW