



PARTS LIST

Frame with Decking Panels	Handrails (1110mm) (2 pcs)	M10x35mm Bolt (4 pcs)
Upper Leg (2 pcs)	Straight Handrail Connectors (2 pcs)	M8x16mm Bolt (6 pcs)
Lower Leg (2 pcs)	Straight Plate (2 pcs)	

ASSEMBLY

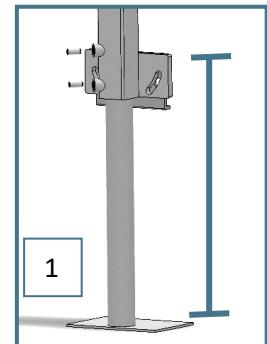

**SET THE TOP OF THE
BRACKET TO THE DESIRED
DECKING HEIGHT.**

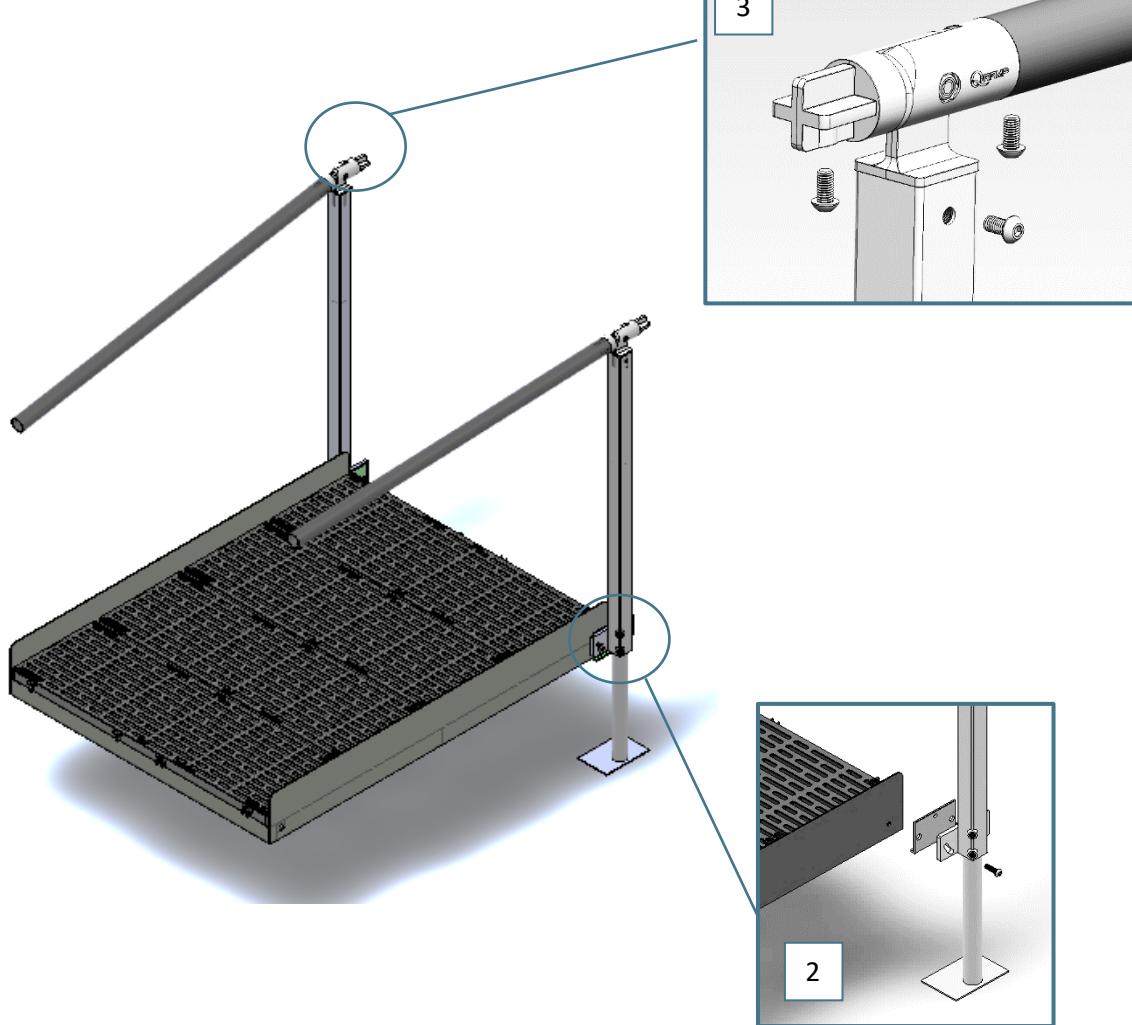

INSTRUCTIONS

- 1 – Set leg height using set screws.
- 2 – Attach leg and bracket to frame using M10x35mm bolt.
- 3 – Attach handrail connector to leg, and then attach handrail to connector using M8x16mm bolts.
- 4 – Attach Mod 1 frame to brackets of adjoining module using M10x35mm bolts.
- 5 – Attach Mod 1 handrails to adjoining module's handrail connectors using M8x16mm bolts.

Note – after ramp has been configured, tighten all bolts.