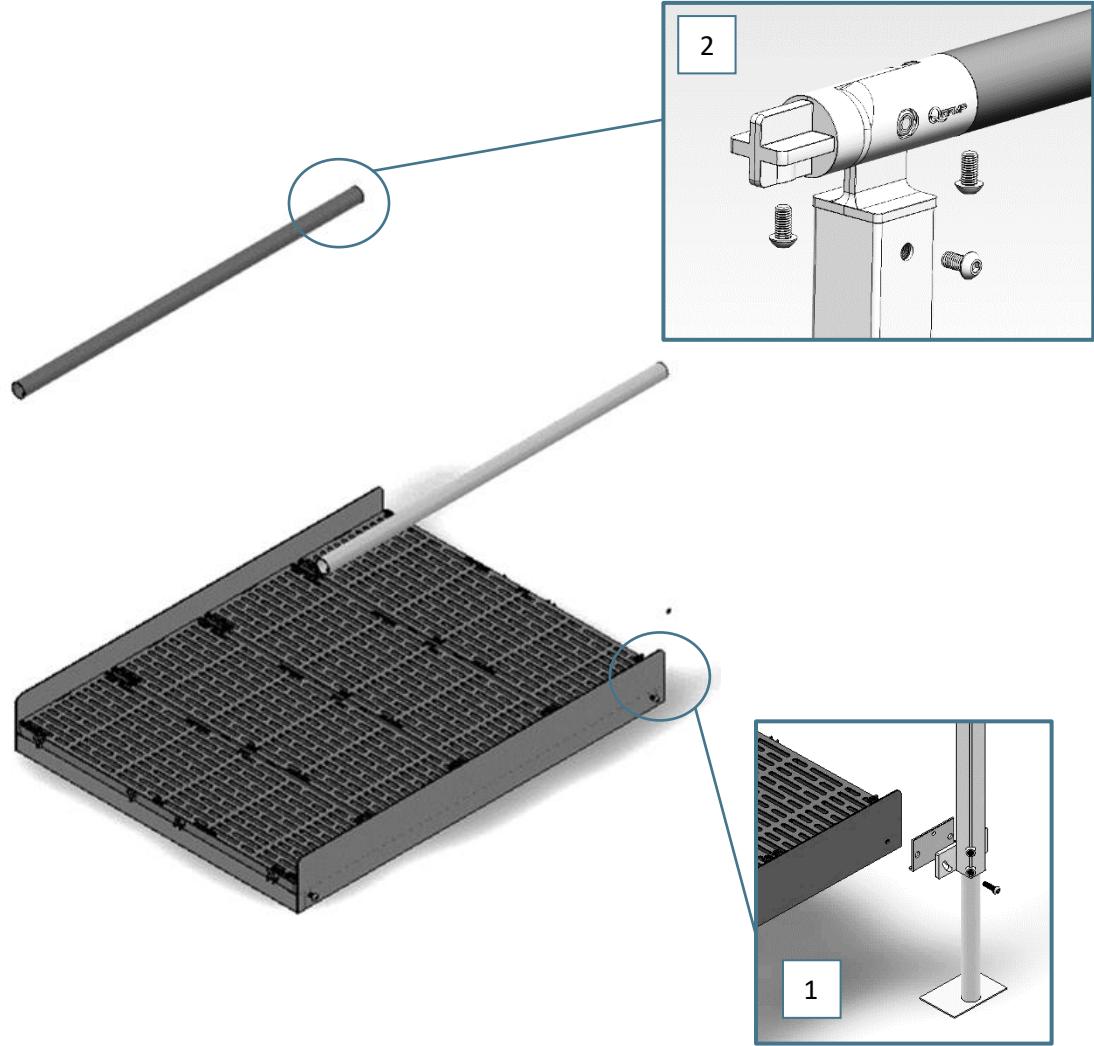


PARTS LIST

Frame with Decking Panels

Handrails (1110mm) (2 pcs)

M10x35mm Bolt (4 pcs)

ASSEMBLY**INSTRUCTIONS**

- 1 – Attach Mod 2 frame to leg and bracket of connecting module using M10x35mm bolt.
- 2 – Attach Mod 2 handrails to connecting module's handrail connectors using M8x16mm bolts.

Note – after ramp has been configured, tighten all bolts.