


PARTS LIST

Frame with Decking Panels	Curved Handrails (2 pcs)	M10x35mm Bolt (2 pcs)
Upper Leg (2 pcs)	Straight Handrail Connectors (2 pcs)	M8x16mm Bolt (6 pcs)
Lower Leg (2 pcs)	Straight Plate (2 pcs)	M8x60mm Bolt (4 pcs)

ASSEMBLY

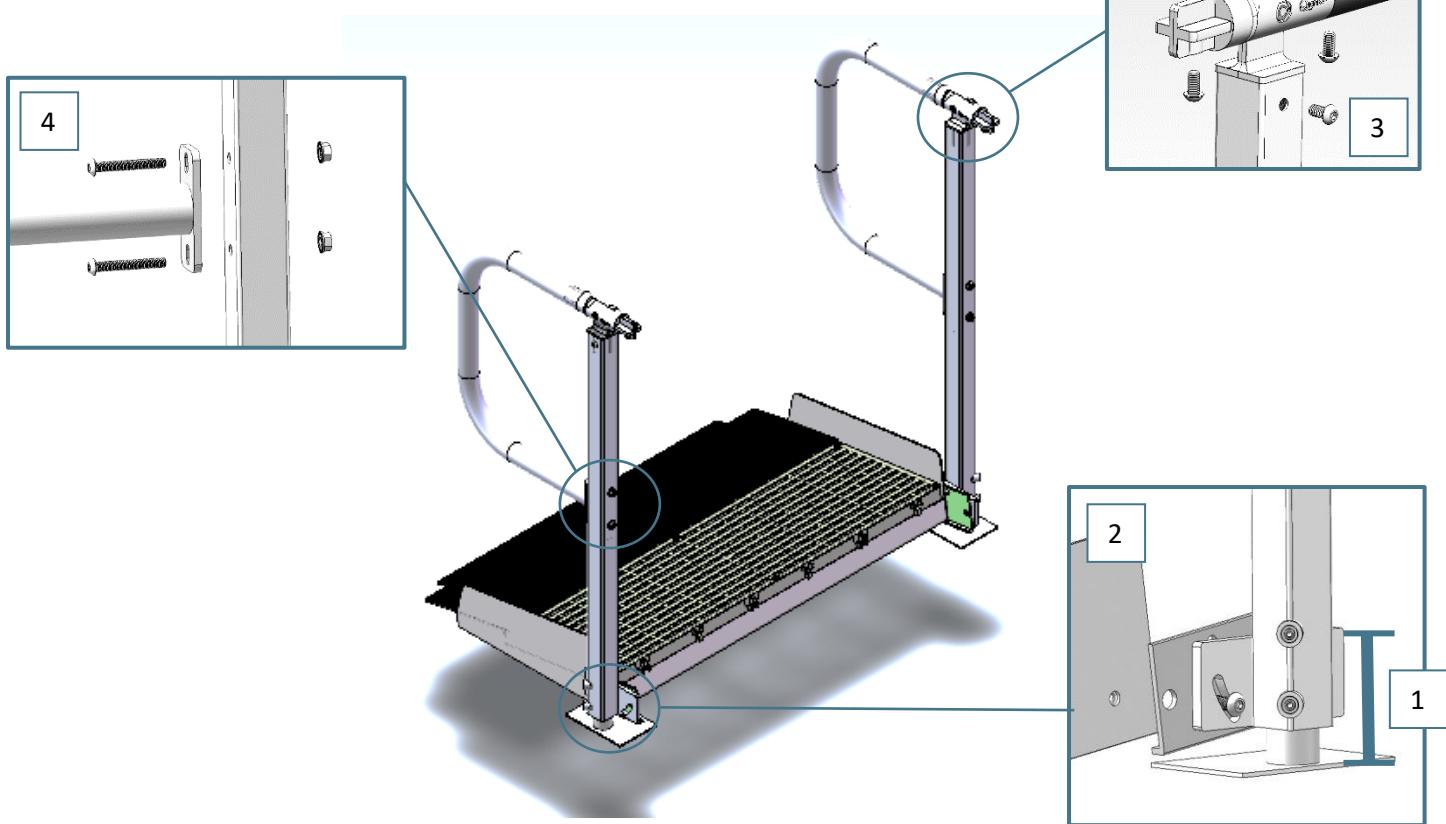

INSTRUCTIONS

- 1 – Set leg height at 3.5" using set screws.
- 2 – Attach leg and bracket to frame using M10x35mm bolt.
- 3 – Attach handrail connector to leg, and then attach handrail to connector, both using M8x16mm bolts.
- 4 – Attach handrail bracket to the leg using M8x60mm bolts and nuts.

Note – after ramp has been configured, tighten all bolts.