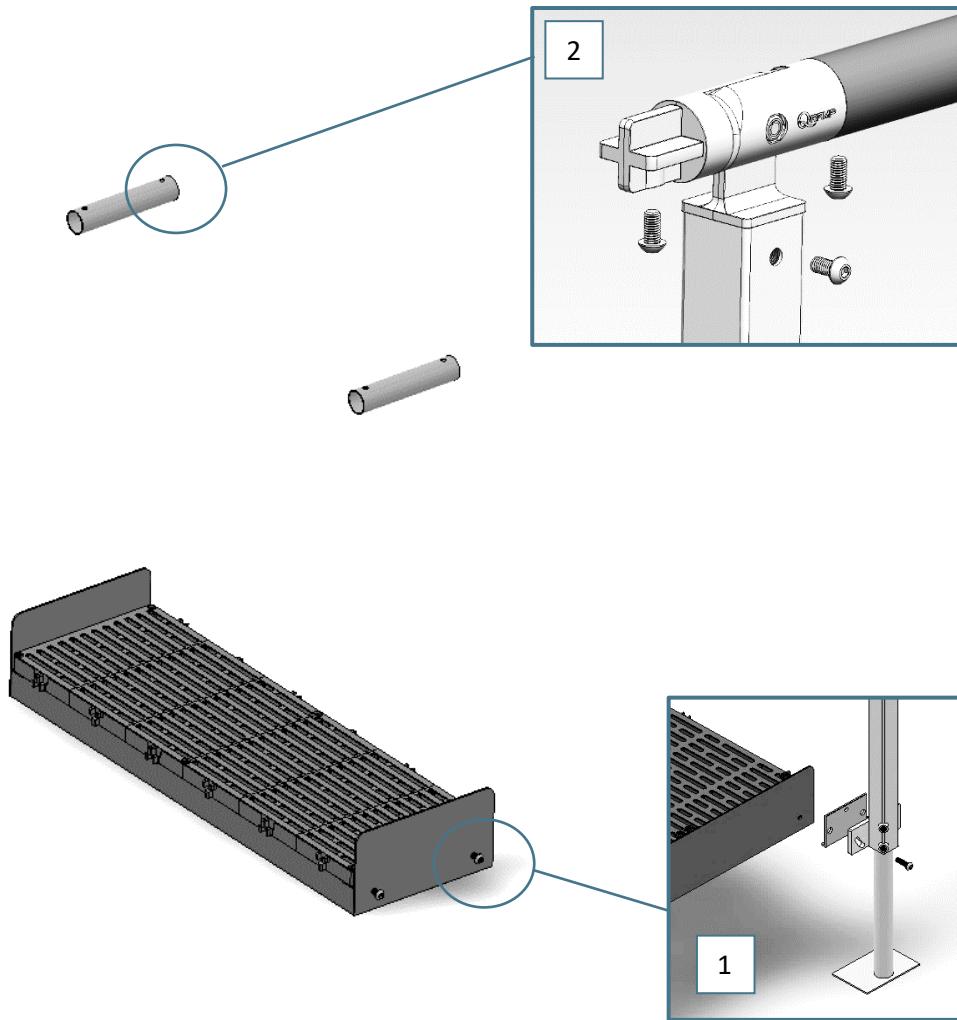


**PARTS LIST**

Frame with Decking Panels

Handrails (201mm) (2 pcs)

M10x35mm Bolt (4 pcs)

**ASSEMBLY****INSTRUCTIONS**

- 1 – Attach Mod 7 frame to leg and bracket of adjoining module using M10x35mm bolt.
- 2 – Attach Mod 7 handrails to adjoining module's handrail connectors using M8x16mm bolts.

*Note – after ramp has been configured, tighten all bolts.*