



PARTS LIST

Frame with Decking Panels
Upper Leg Straight (2 pcs)
Upper Leg Corner (1 pc) E
Upper Leg Corner (1 pc) F
Lower Leg (4 pcs)
Support Leg Left (1 pc)
Support Leg Right (1 pc)



Platform Plate Left (2 pcs)
Platform Plate Right (2 pcs)
Straight Plate (2 pcs)
Straight Handrail Connectors (2 pcs)
Corner Handrail Connector Right (2 pcs)
Corner Handrail Connector Left (2 pcs)

Handrail – 1249mm (1 pc) A
Handrail – 1130mm (1 pc) B
Handrail – 295mm (2 pcs) C
M10x45mm Bolt (4 pcs)
M10x35mm Bolt (6 pcs)
M8x16mm Bolt (18 pcs)

ASSEMBLY

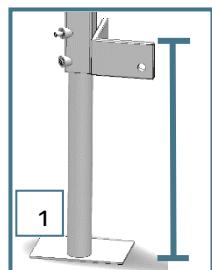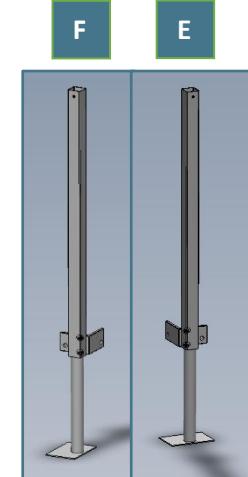

SET THE TOP OF THE
BRACKET TO THE DESIRED
DECKING HEIGHT.

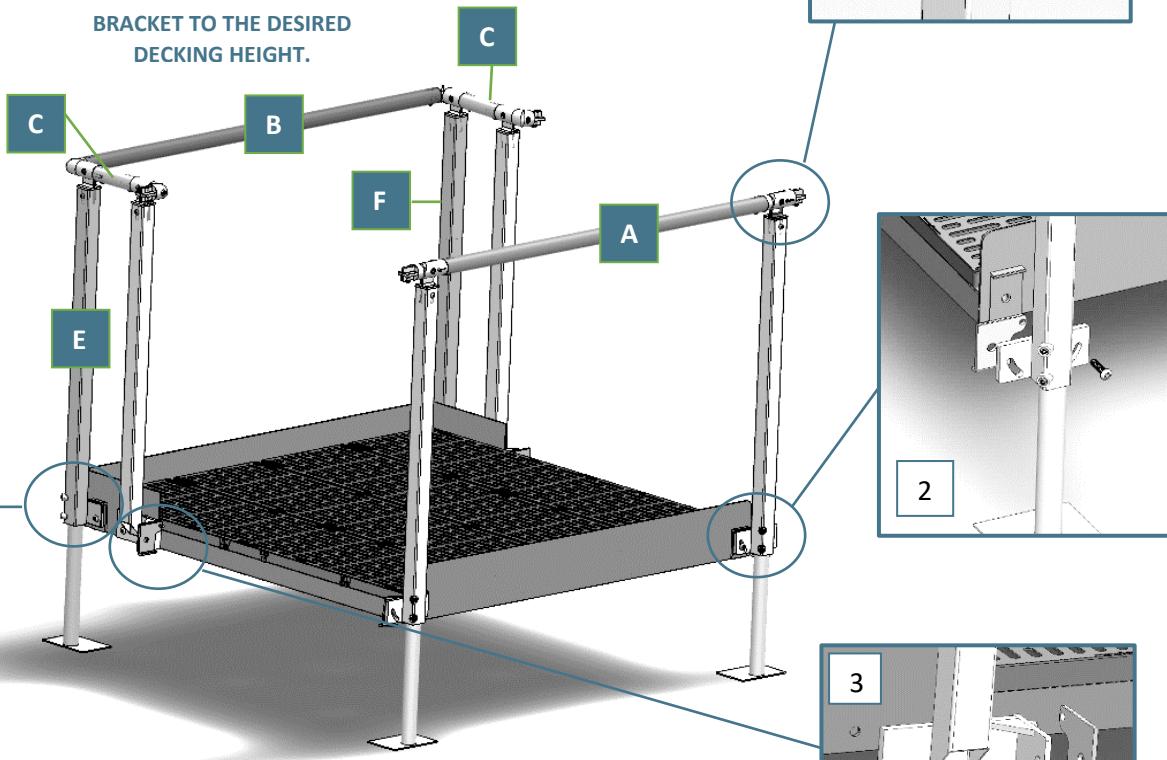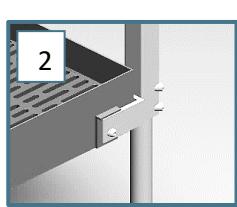

INSTRUCTIONS

- 1 – Set desired leg height of all four legs using set screws.
- 2 – Attach legs to frame using M10x35mm bolts.
- 3 – Attach support leg to frame using M10x45mm bolts.
- 4 – Attach handrail connectors to legs, and then attach handrails to connectors using M8x16mm bolts.

Note – after ramp has been configured, tighten all bolts.