


## **PARTS LIST**

Frame with Decking Panels	Curved Handrails (2 pcs)	M10x35mm Bolt (6 pcs)
Upper Leg (2 pcs)	Straight Handrails (2 pcs)	M8x16mm Bolt (12 pcs)
Lower Leg (2 pcs)	Straight Handrail Connectors (4 pcs)	M8x60mm Bolt (4 pcs)
Support Leg (2 pcs)	Straight Plate (2 pcs)	M8 Lock Nut (4 pcs)

## **ASSEMBLY**

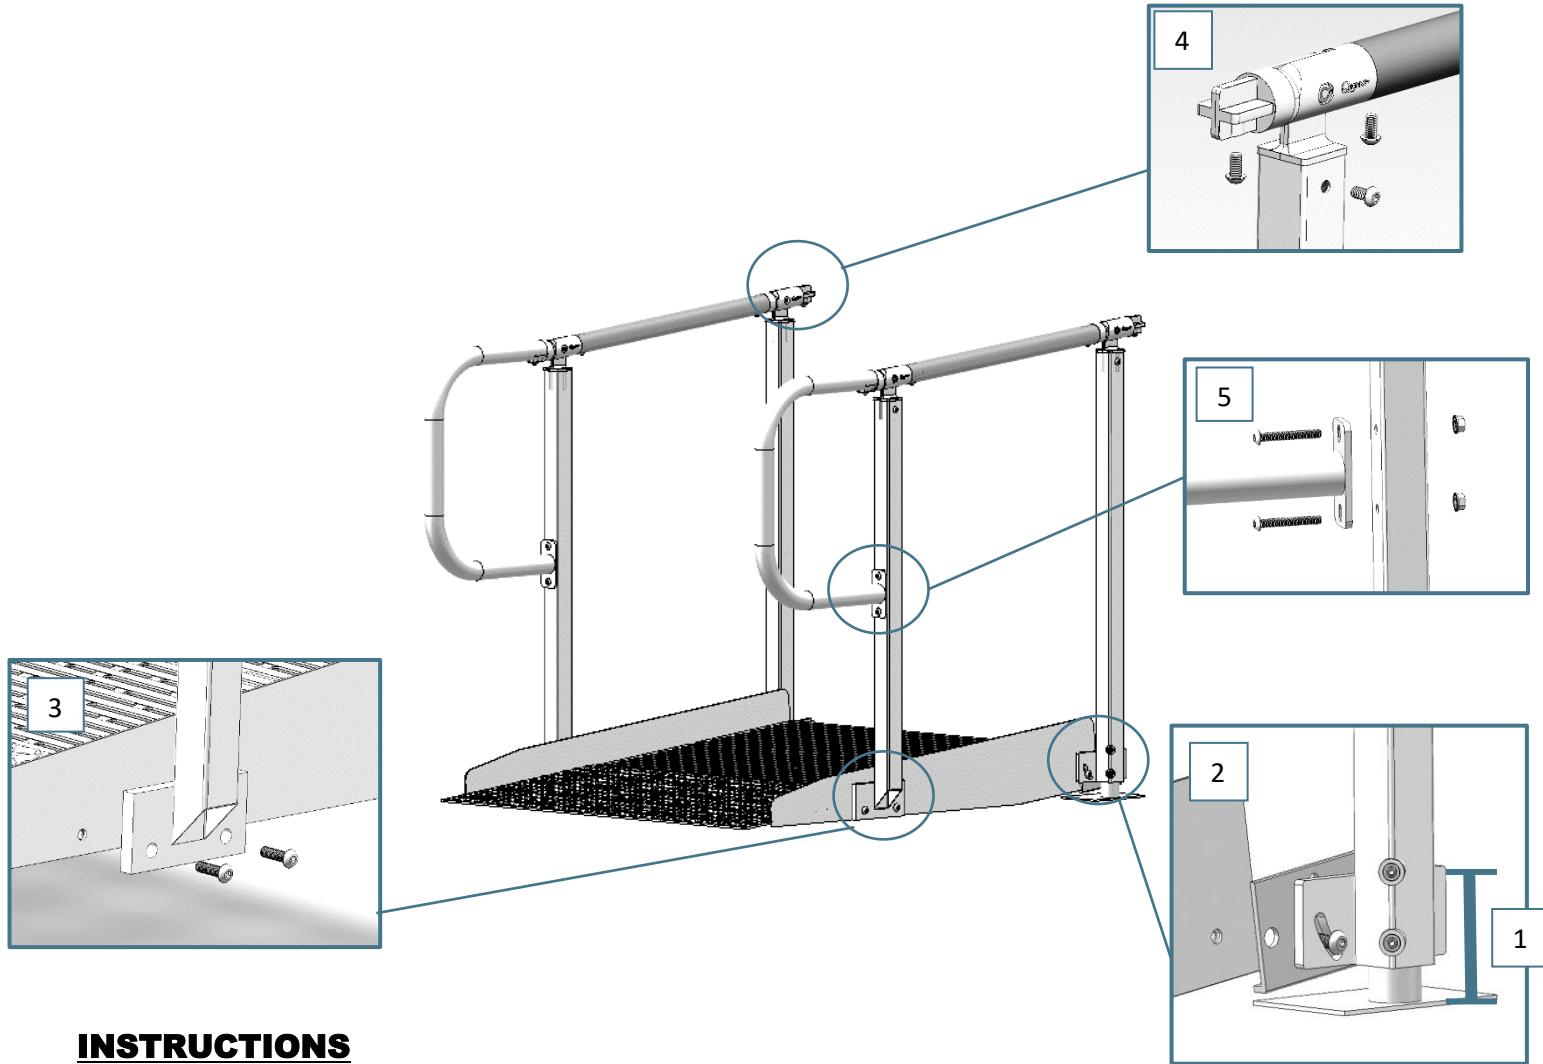

## **INSTRUCTIONS**

- 1 – Set leg height at 3.5–4 inches using set screws.
- 2 – Attach leg and bracket to frame using M10x35mm bolt.
- 3 – Attach support leg to frame using M10x35mm bolts.
- 4 – Attach handrail connector to leg, and then attach curved and straight handrails to connector using M8x16mm bolts.
- 5 – Attach handrail bracket to the leg using M8x60mm bolts and nuts.

*Note – after ramp has been configured, tighten all bolts.*