




HA0362
REVOLUTION SCREEN CONTROL KIT




MIDWEST IND.

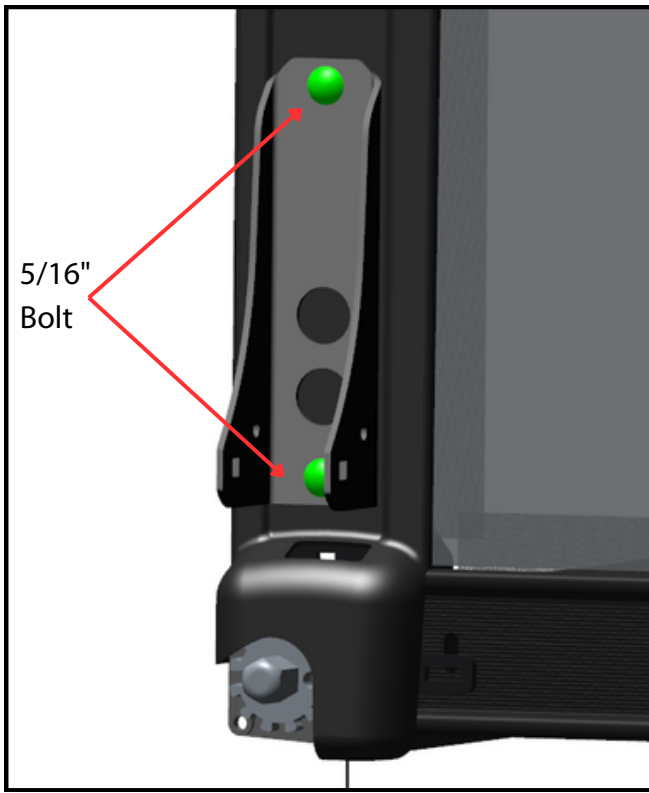

STEP 1: MOUNT THE CONTROL ARM

Mount the control arm to the Revolution Canopy using the provided 5/16" hardware. These bolts have a black finish. Secure with the corresponding washer and nut on the back side. In the upper opening of the bracket, drill a 1" hole through the plastic cover of the screen to allow the extension harness to be fed through.

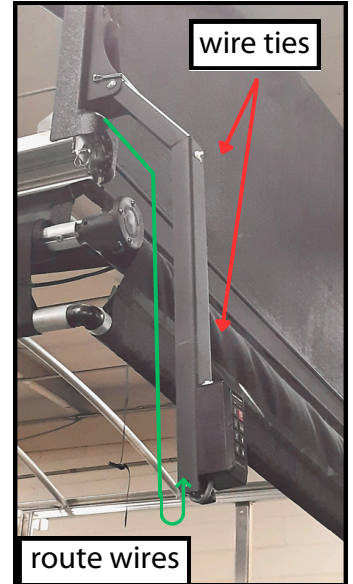

STEP 2: RUN THE EXTENSION WIRE

Locate the 50FT keypad extension wire included in the lifts pump box. Run the square male end of this extension through the canopy frame and down the mounting arm.

STEP 3: MOUNT THE KEYPAD TO THE ARM

Using the provided screws, begin by mounting the bottom screw first and rotate the keypad downward to allow the extension harness to be plugged in. Once the extension harness is plugged in, rotate the keypad up and insert the top screw.

STEP 4: PLUG IN THE RELAY

Refer to the Owner's Guide for proper location and installation of the relay.

Once the relay is installed, locate the provided 15FT extension wire and plug it into the relays main wiring harness. Run this extension down the canopy leg and into the pump box, making the final connection at the main harness.

Hide any excess wires in the pump box or canopy frame and reinstall the pump box lid to complete installation.