

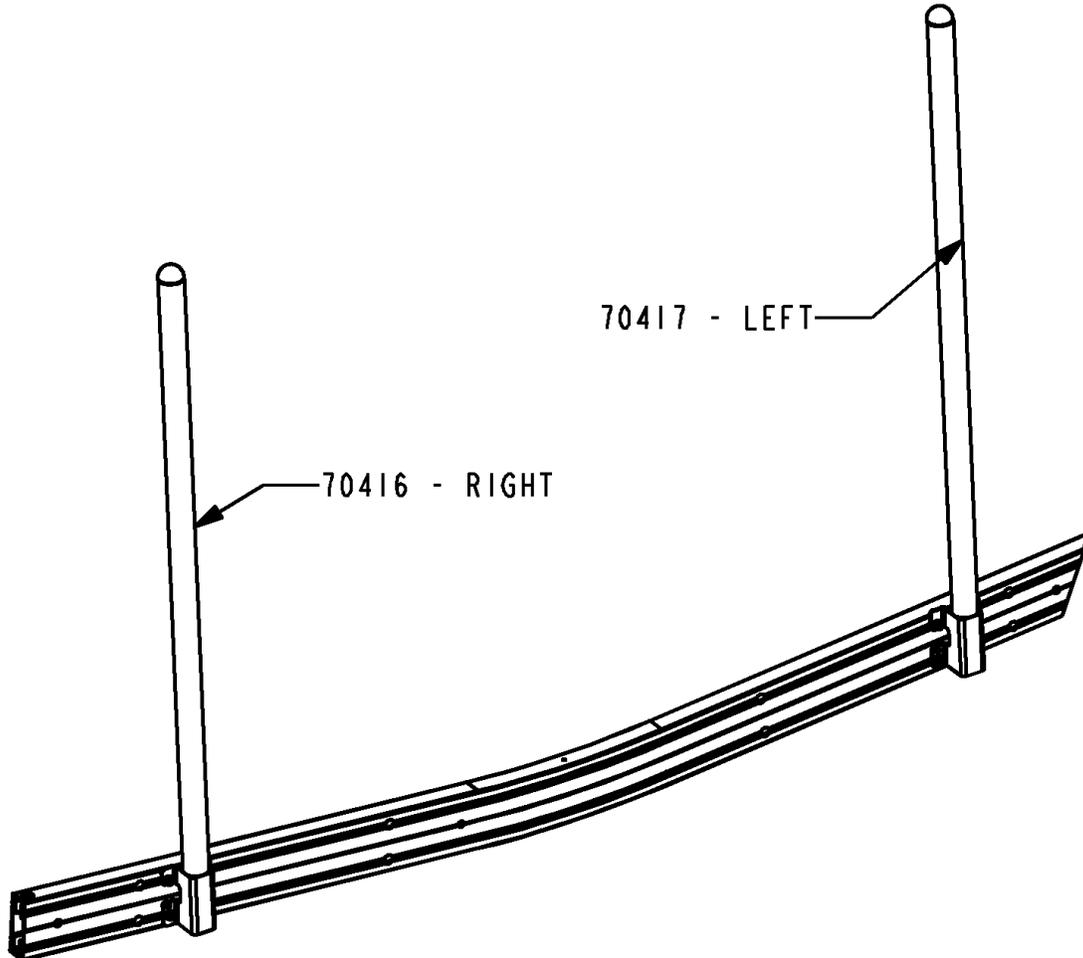



HA0097-15
5FT POST LOADGUIDE ALUMINUM V-FRAME LIFT FOR FREE
STANDING LIFTS 3000 THRU 7000 & BOATHOUSE/PILING
MOUNT LIFTS 4000 THRU 7000 V-FRAME

HA0255-15
23" POST LOADGUIDE FOR 5.75" T-SLOT TUBE V-CRADLE
PLATFORMS

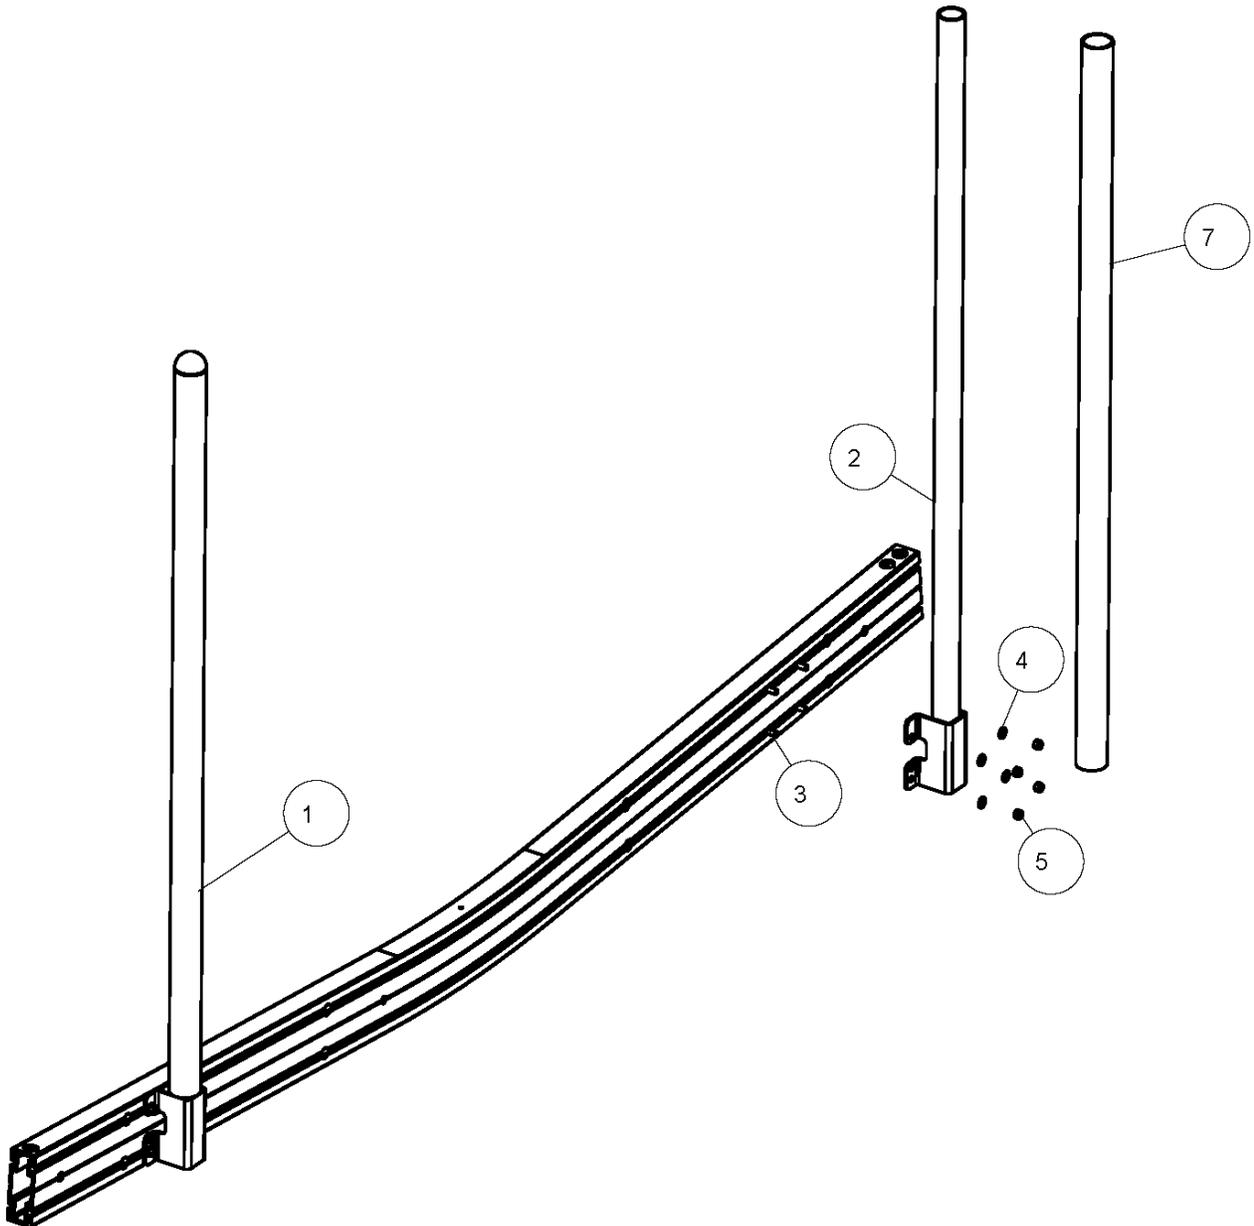


ITEM	PART #	DESCRIPTION	QTY	NOTE
1	70416	WMENT ALUM POST LOADGUIDE RT	1	
2	70417	WMENT ALUM POST LOADGUIDE LT	1	
3	0250130	CARR 3/8-16 X 1 GR5	8	
4	1350095	WASHER USS FLAT 3/8 STAINLESS	8	
5	1440366	HEX LOCKNUT 3/8 BRASS/NYLON INSERT	8	
6	3510337	DOCK BUMPER CAP SPECKLED BEIGE	2	
7	3510338	POLY TUBE 2 5/16 OD SPECKLED BEI	2	



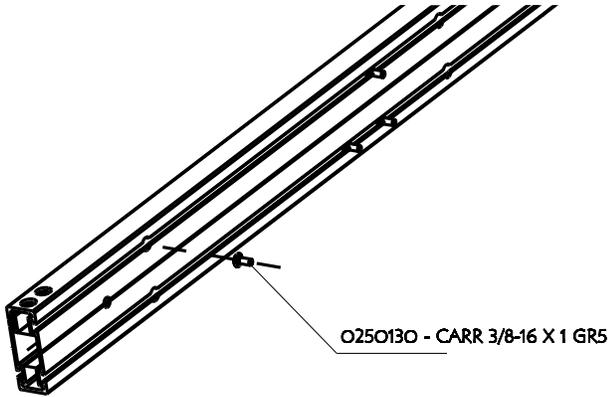


Insert mounting bolts into the slots on the inside of the platform v-frame and slide toward the desired location.

This view from inside the platform

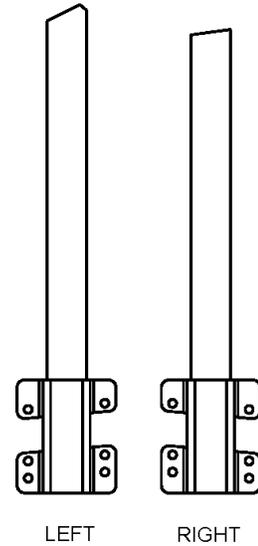

Place the load guides over the mounting bolts making sure to align them properly with the holes. All bolts used to secure the mounting brackets to the v-frame will be secured with flat washers and locknuts with nylon inserts.

With the boat centered on the platform adjust the assemblies until they are spaced properly and secure using the hardware included with the kit.

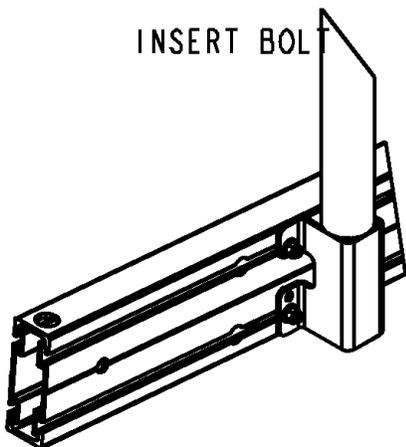

When completed unload the boat and reload again to check and make sure everything is aligned properly. If need be repeat the process again to get the proper placement and spacing.

