




SK0374

RELAY WIRELESS NO LIMIT W/HARNESS

Important points before making electrical connections:

1. Unplug main power disconnect BEFORE replacing any components.

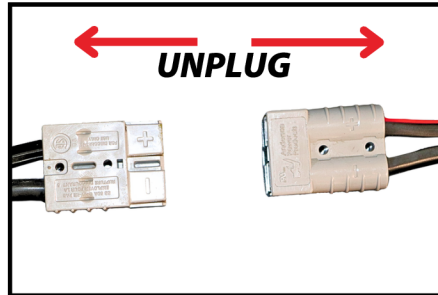


2. Ensure **RED** is always on **POSITIVE**, and **Black** is always on **NEGATIVE** (at both the relay and the battery).
3. DO NOT plug in the main power disconnect prior to making all ring terminal connections at the relay and the battery.

***Failure to adhere to either of these steps could lead to a blown fuse and potential equipment damage.

1. Replace the Relay

After unplugging the power disconnect, undo the power and motor connections on the existing relay. They will be used again on the new relay. See the diagrams below for which terminals to land which cables.


Notice installment position along bottom rail of Revolution Canopy. Legacy and Boathouse positions determined by installer. Existing hardware should be reused for Revolution. Self tapping screws for Legacy.

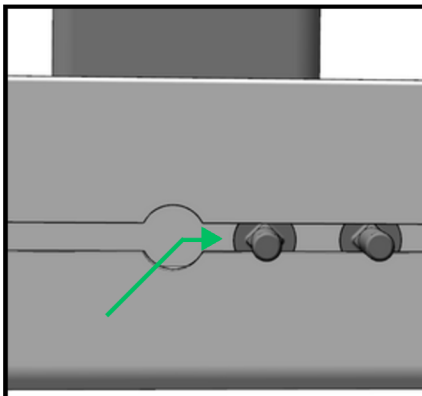

MIDWEST IND.

ShoreLandr® | ShoreStation® | ByronSELECT®

www.shorestation.com

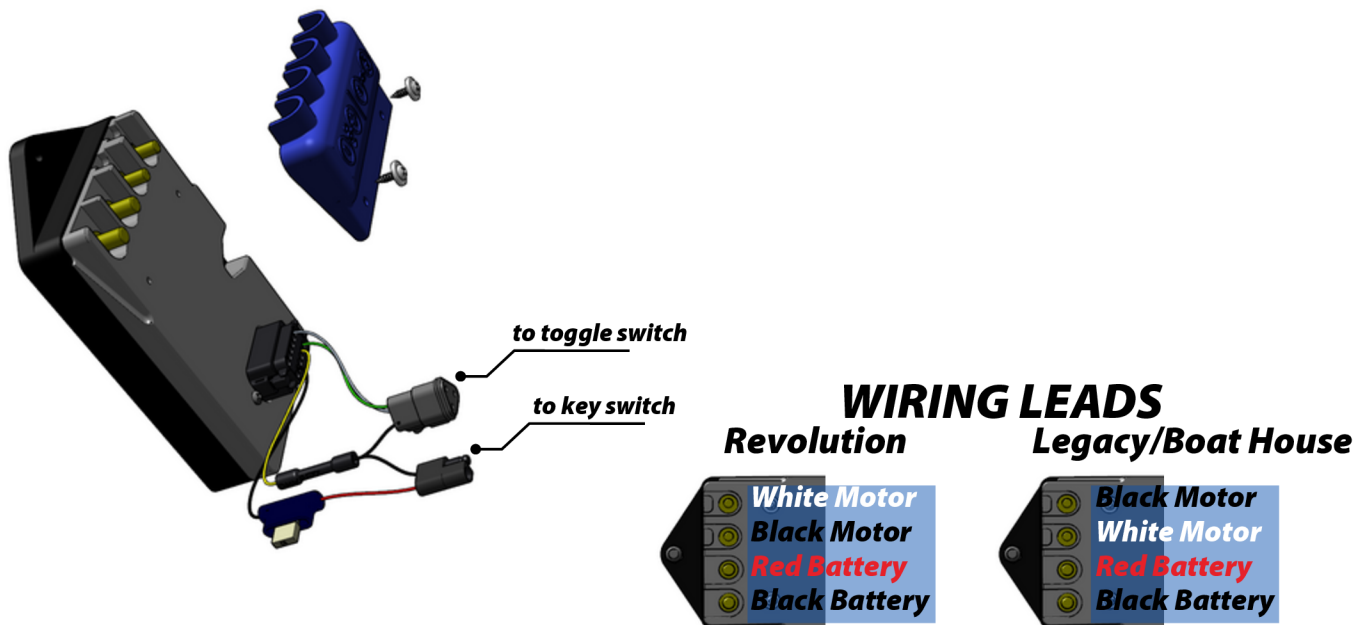

2. Add Fuse to Power Cord



Provided 100A Fuse and Fuse Holder

Identify the existing cable at the battery (or batteries) that is powering the ShoreScreen relay. Loosen and temporarily remove the red power cable from the positive battery terminal. The black cable on the negative terminal can remain hooked up.


Connect the fuse holder provided with Service Kit to the positive terminal of the battery. Ensure the 100A fuse provided in this Service Kit is still in place on top of the fuse holder.

- If there is an additional existing fuse connected to the positive terminal of the battery (i.e. a fuse for the pump to a ShoreStation lift), do not remove it. Simply install the 100A fuse and holder on the same battery terminal. See image to right.



Reconnect the red power cable on top of the new 100A fuse.

Once all connections have been made and confirmed correct at both the battery and the relay, the main power disconnect can be plugged back in. See Wireless Remote Pairing Instructions (doc# 0004727) on how to pair remote to replacement relay.

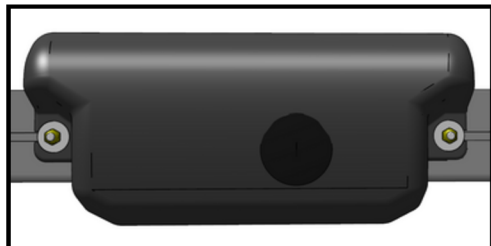

Install cover with plug for cosmetic purposes. Provided hardware uses slotted retainer on lower portion of the canopy frame. Wires should be routed up and behind the relay cover.



MIDWEST IND.

ShoreLandr® | ShoreStation® | ByronSELECT®

www.shorestation.com