


*** DANGER - CAUTION ***

Always Lower The Boat Lift Before Attempting Assembly.

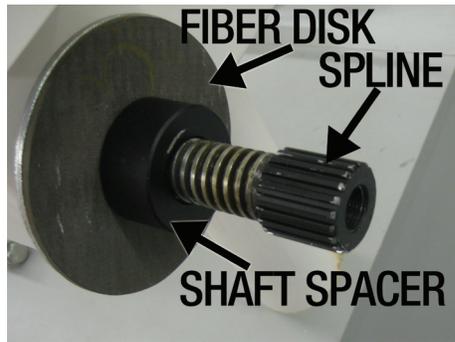

1. Lower the Boat Lift.
2. Remove the Acorn Nut and Wheel.
3. Remove the Brake Dog, Brake and Brass Washer. You Will Not Need Them.

4. Leave the Original Fiber Disc On. Install the Shaft Spacer.
5. Install the Spline.

You Can Remove the Bracket and Metal Plate Behind the Nut as You Will Not Need.




6. Slide the Motor onto the Spline so it Sits Level.

7. Install the Strap Around the Motor. Install the Bracket and Tighten the 9/16 Bolts.

8. Install the Bolt and Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.

In Case of a Power Outage This Tool May be Inserted Into a Drill to Raise or Lower Your Lift. First Remove Rubber Cap From the Motor Shaft.

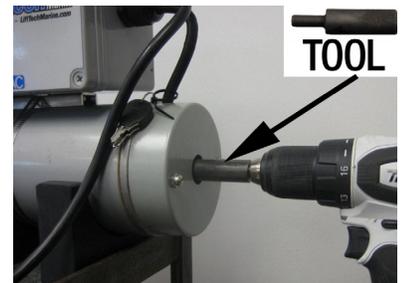

Recommended Extension Cords up to 150 feet 12/3.
 Any question regarding electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

*** DANGER - CAUTION ***

All Power Used on Your Dock or Lift Needs to be GFI Protected at the Shoreline.