



DA0134 DA0135 DA0136
SIDE LEFT RIGHT

DOCK BUMPERS



DA0134



DA0135



DA0136




MIDWEST IND.

ShoreLand® | ShoreStation® | Byron^{SELECT}™

www.shorestation.com

71678


SIDE WELDMENT

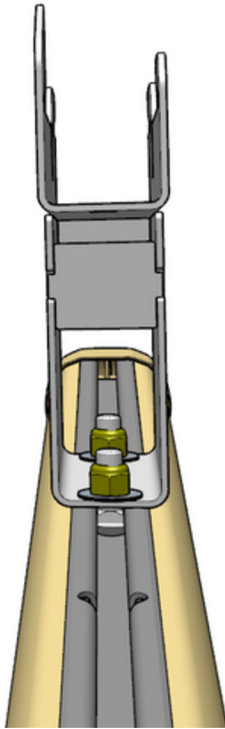

DA0134

71710


LEFT WELDMENT

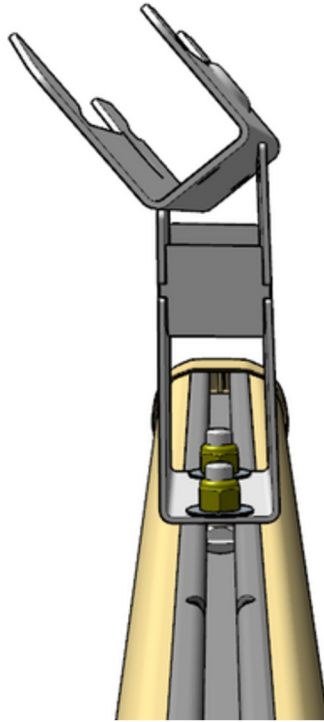


DA0135

71711

RIGHT WELDMENT

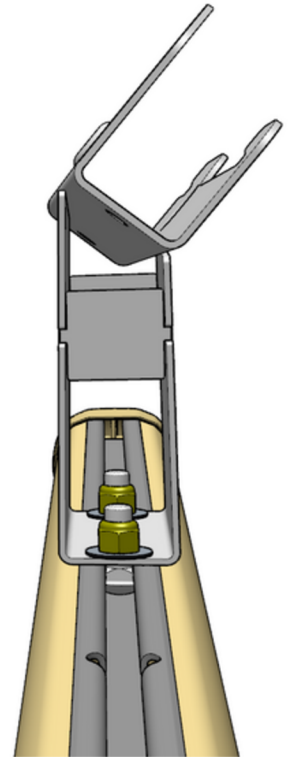


DA0136

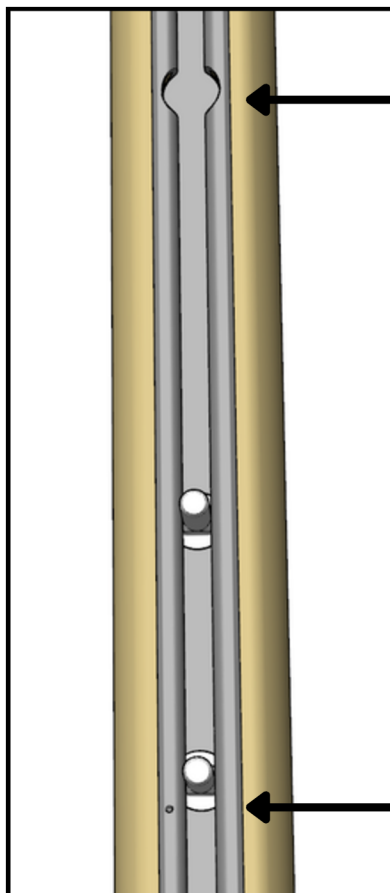

BOLTS SHOULD GO THROUGH CHANNEL HERE.

PLACE BRACKET AT DIMPLE IN EXTRUSION HERE.

ATTACHMENT HOOKS OF WELDMENT SHOULD BE FACING DOWN.

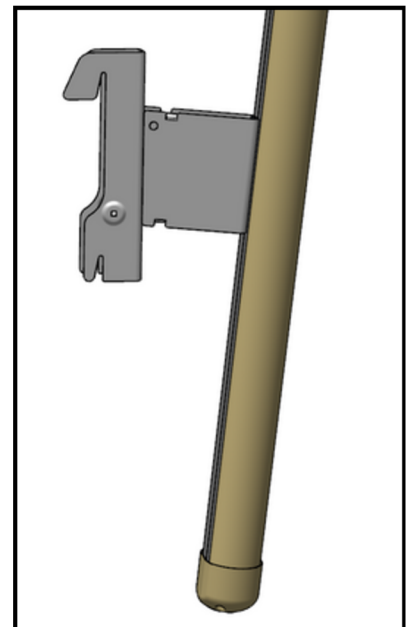

MIDWEST IND.

ShoreLandr® | ShoreStation® | ByronSELECT™

www.shorestation.com