


## 2012 REMOTE REPROGRAMMING INSTRUCTIONS:

1. POWER UP UNIT.
2. REMOVE 4 PLASTIC SCREWS ON COVER OF CONTROL BOX.
3. ON THE ELECTRICAL BOARD YOU WILL FIND A BLACK BUTTON (NEXT TO RED LIGHT).
4. PUSH THE BUTTON AND RELEASE. A RED LIGHT WILL APPEAR AND STAY SOLID.
5. PUSH THE UP BUTTON ON REMOTE, RED LIGHT SHOULD FLASH.
6. WAIT A MOMENT AND PUSH UP BUTTON AGAIN. MOTOR SHOULD START.
7. REPEAT FOR 2ND REMOTE.

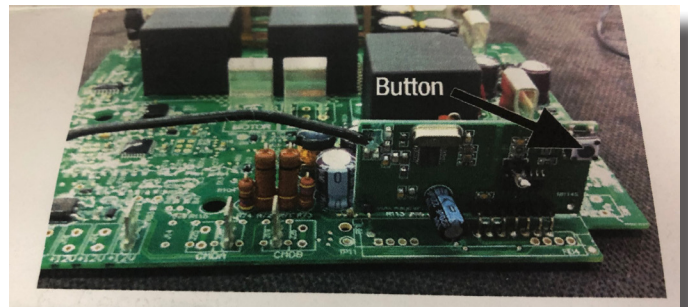

IF YOU HAVE ANY QUESTIONS, PLEASE CALL US AT 866-319-8877