




**PRODUCT ASSEMBLY INSTRUCTIONS:**



[www.wavearmor.net](http://www.wavearmor.net)

**Item # | Product Name:** #300493 Anchor Cap Mooring Kit

Parts List:	Tools Needed:
1. Post Attachment (1)	1. Mallet
2. Anchor Cap Pin (1)	2. Silicone (optional)
3. Metal Anchor Bracket (1)	3. Ratchet
4. 3/8" x 1 1/2" Bolts (4)	4. 9/16" Socket
5. 3/8" x 3/4" Button Head Bolts (3)	5. Cordless Drill & Phillips bit (or Phillips Screwdriver)
6. Locking Washers (3)	6.
7. 3/8" Washer (4)	7.
8.	8.
9.	9.
10.	10.

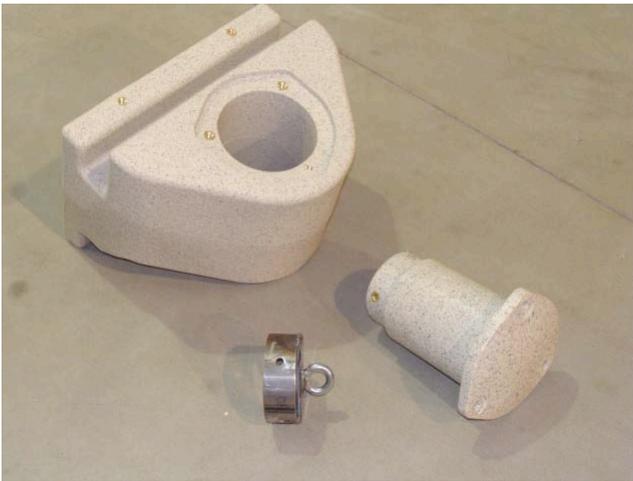

Parts Shown: #1, #2, #3



Completed Anchor Pin Kit

**Assembly Instructions:**

1. Slide Post Attachment into H-channel on Wave Dock. Secure in desired position with a 3/8 x 1 1/2 bolt and 3/8 washer.



2. Attach metal anchor bracket to the bottom of the plastic anchor pin using the 3/8 x 3/4 button head bolts and locking washers.



3. Insert the plastic pin and bracket into the post attachment and secure with the 3/8 x 1 1/2 bolts and washers. Anchor can now be connected to the eye loop on the bottom of the anchor pin.

