


Part # 1019486  
 QC Accessory Uni-Dock Adapter  
 Kit

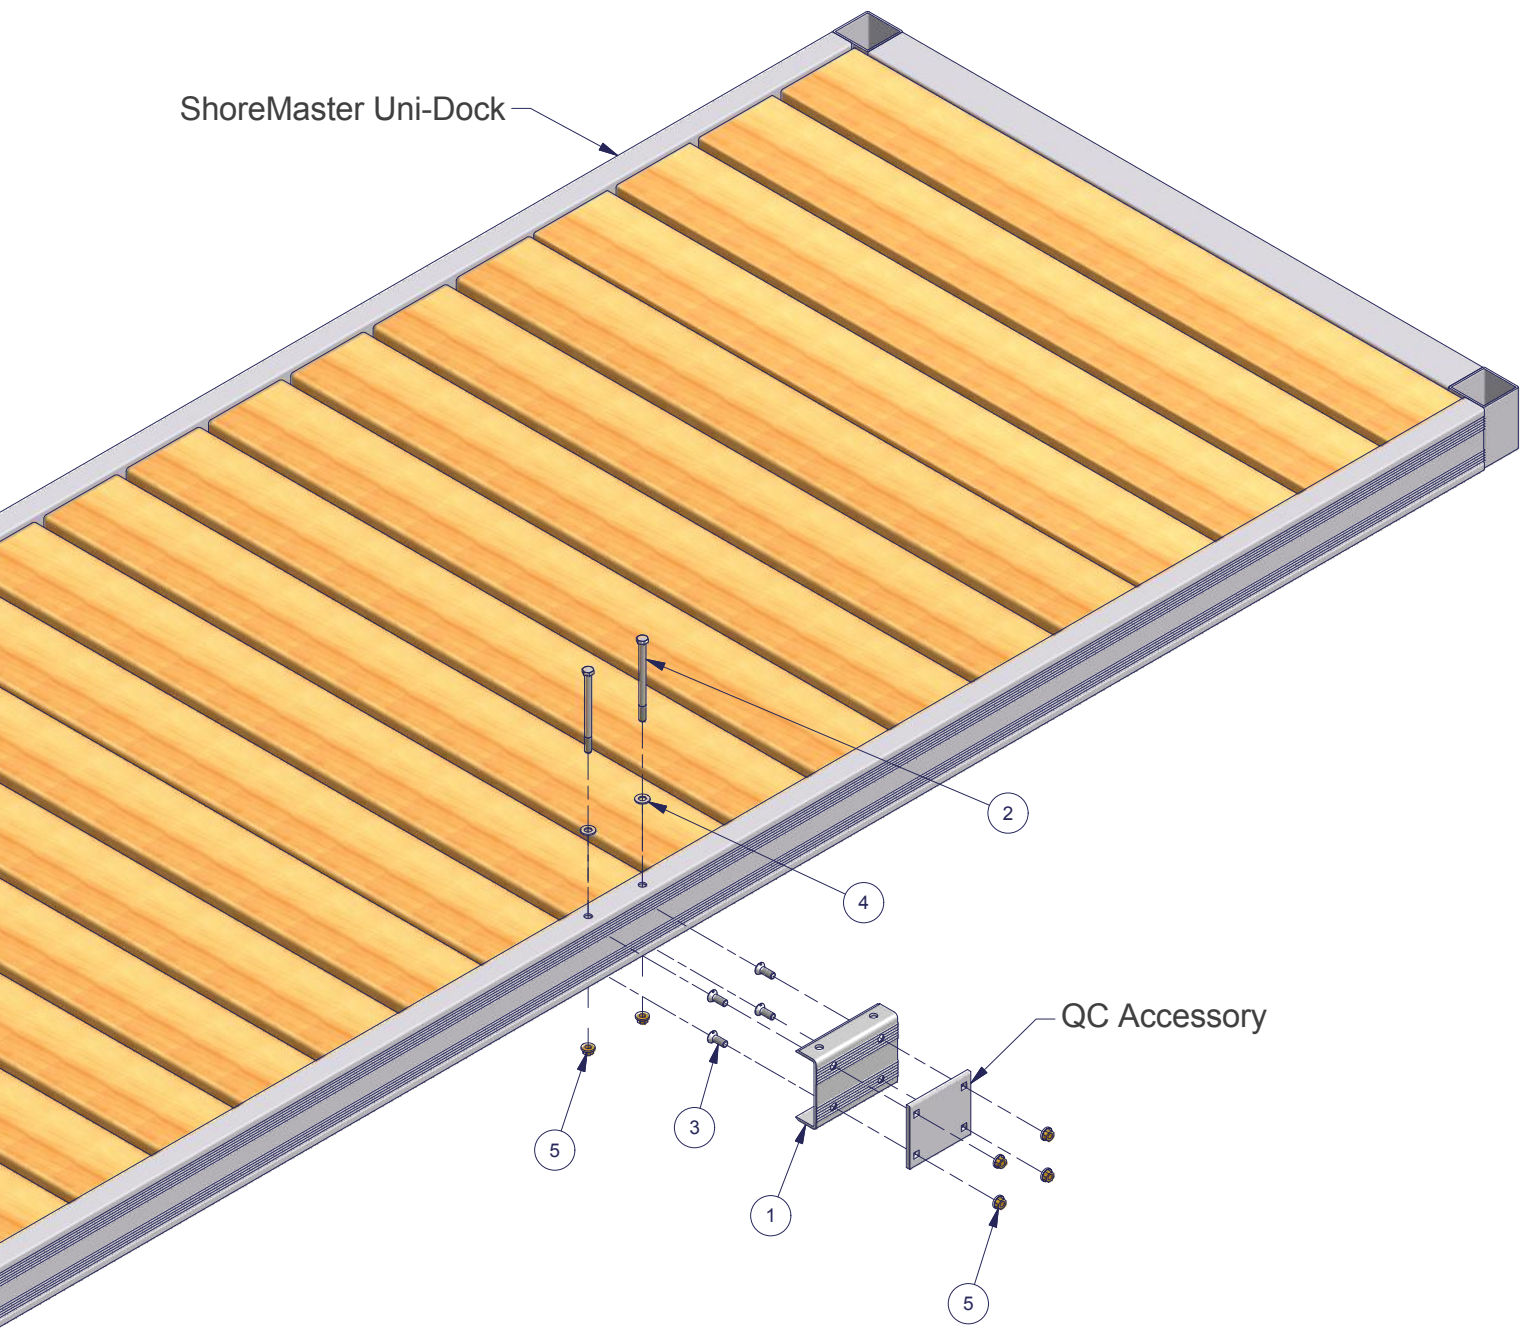

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1019485	Prt Channel QC Accessory Uni-Dock Adapter
--	1	1019487	Bolt Bag QC Accessory Uni-Dock Adapter
2	2	1002444	Bolt Hex 3/8-16 x 5.0 SS 304
3	4	1000563	Screw Flat Phil 3/8-16 x 1.0 SS
4	2	1002599	Washer Flat 3/8 SS
5	6	1001802	Nut Flange 3/8-16 Brass

Step 1: Attach QC accessory to QC accessory Uni-Dock adapter channel using 3/8 x 1 screw flat and flange nuts.  
 Step 2: Slide QC assessorry Uni-Dock adapter channel onto Shoremaster Uni-Dock and drill 7/16" holes vertically through rail and attach channel using 3/8 x 5 hex bolts and flange nuts.