

Swivel Dock Chair DA0124

Introduction

The updated version of the ShoreStation's popular Swivel Dock Chair now features Trex® composite seat and back material and is available in brown and gray tones.




The assembly process explained in this document should be performed by a qualified ShoreStation technician who understands the proper techniques and applications of the equipment used during the assembly process



WARNING

DO NOT ATTEMPT TO ASSEMBLE THIS PRODUCT WITHOUT FIRST STUDYING THIS MANUAL AND INFORMATION ON LABELS INCLUDED WITH THE SYSTEM. FAILURE TO DO SO CAN LEAD TO IMPROPER OPERATION RESULTING IN SERIOUS PERSONAL INJURY AND/OR PRODUCT DAMAGE. IF YOU HAVE FURTHER QUESTIONS AFTER REVIEWING THIS INFORMATION, CONTACT A SHORESTATION REPRESENTATIVE AT (800) 859-3028.

Safety Definitions

Safety messages are presented throughout this document and labels affixed to the product. The messages alert you to potential hazards to you and/or property. The signal words **DANGER**, **WARNING**, and **CAUTION** are preceded by an alert symbol  and communicate the severity of potential hazard. The severity of each type of message is defined as follows:

- **DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Safety Instructions

WARNING

- Remove any metallic objects from your person before working with DC or AC electrical components.
- Disconnect power from the lift and turn the key switch (if available) to the OFF position before working on the lift.
- Assembly and installation of this system may require working over water. Always wear a personal floatation device (PFD) when working over the water
- Always wear proper personal protective equipment such as safety glasses, gloves, hardhats, and clothing.
- Never work alone and observe safe lifting practices such as team lifting and proper lifting posture.
- Do NOT modify the equipment unless you have received direct written approval from the manufacturer (ShoreStation[®]).

Tools Required:

Cordless Power Drill
SAE Socket & Wrenches


Assembly Instructions

1 – Organize Parts

Open the hardware box and bag(s), and sort the hardware.


2 – Connect Chair to Base

Use the 1/4-20 x 3/4 carriage bolts and 1/4 keps nuts to bolt the upper base weldment to the swivel chair.

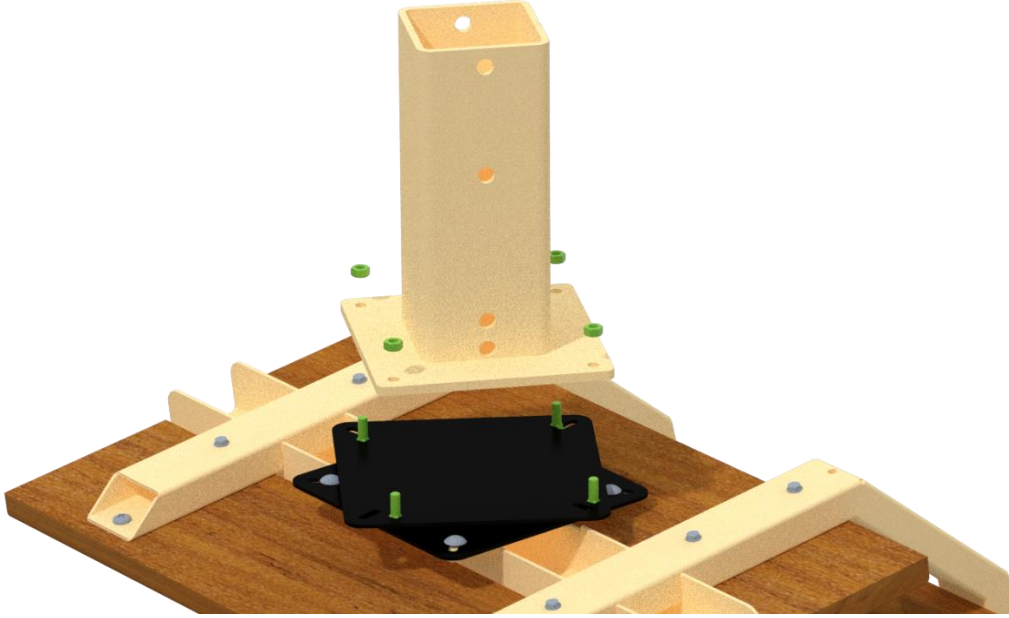


3 – Add the Arms

Align the holes of the chair's arms with the holes in the seat of the chair. Insert the 3/8-16 x 1-1/2 carriage bolts and tighten the 3/8 flange locknuts (as shown below).

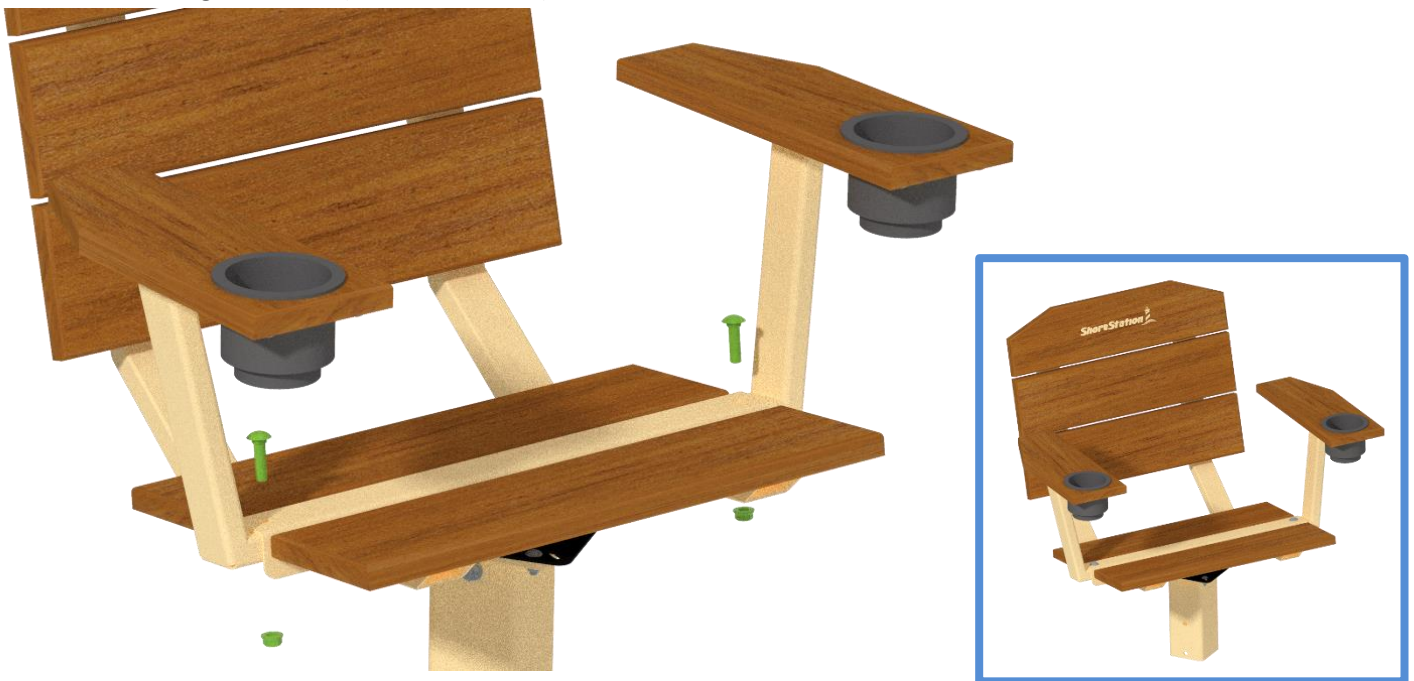


6 – Attach Foot Ring to Lower Base

Put the square tube of the lower base weldment through the center of the foot ring, align the holes, and insert two 3/8-16 x 4 bolts through the holes. Add 3/8 lock washers and nuts and tighten.

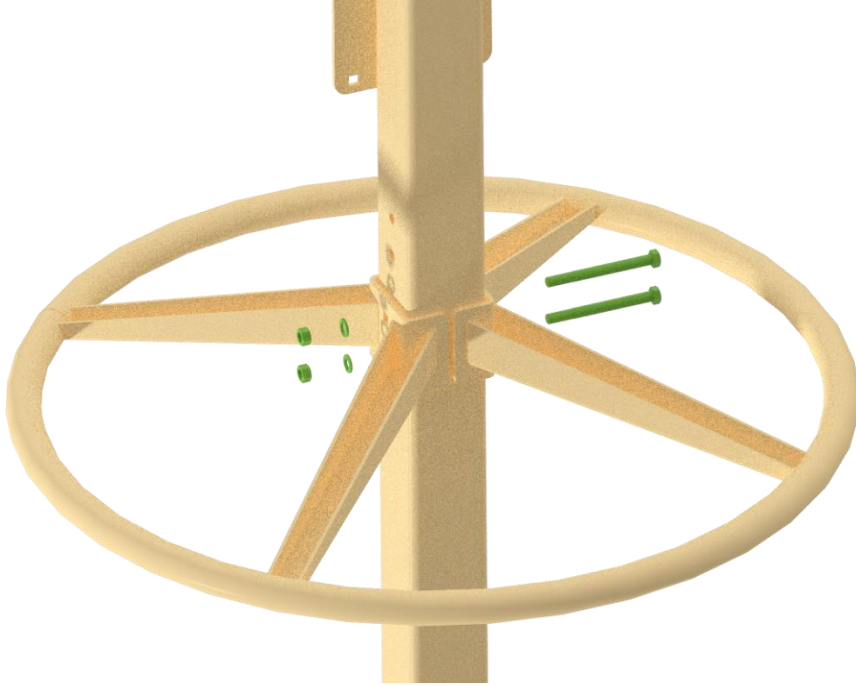

6 – Add Dock Accessory Mount

Attach the dock accessory mount to the lower base weldment using 3/8-16 x 1-1/4 carriage bolts, flat washers, and 3/8 locknuts (as shown below).

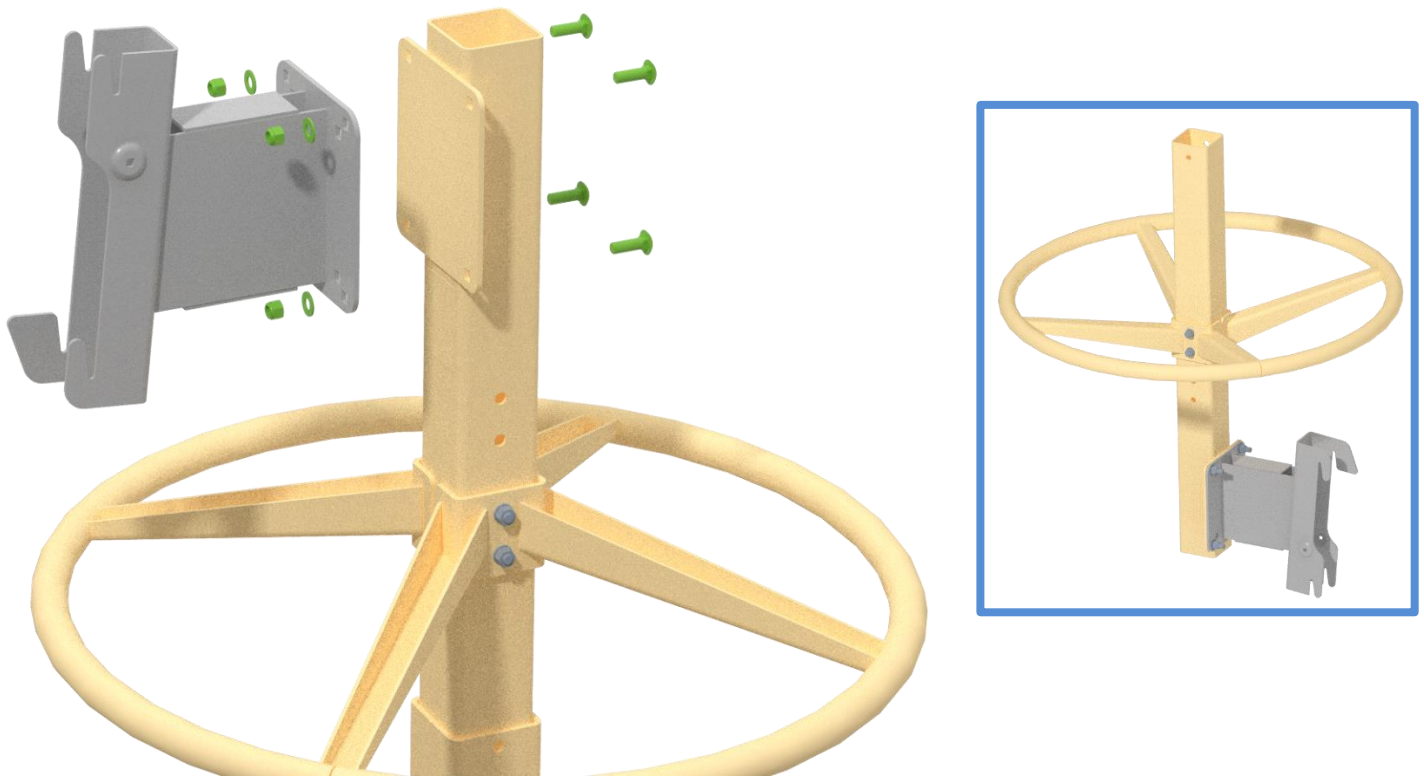

4 – Connect Chair to Lower Base

Insert the lower frame weldment tube into the upper frame weldment tube, align the holes, and put a 3/8-16 x 4 bolt through the holes. Tighten a 3/8 flange locknut on the bolt.

